HOME
DECORATORS
C O L L E C T I O N

BF-24890 MSL BOOT RACK 33"W × 14"D × 27"H

INV#10358

ASSEMBLY INSTRUCTIONS

Made In China

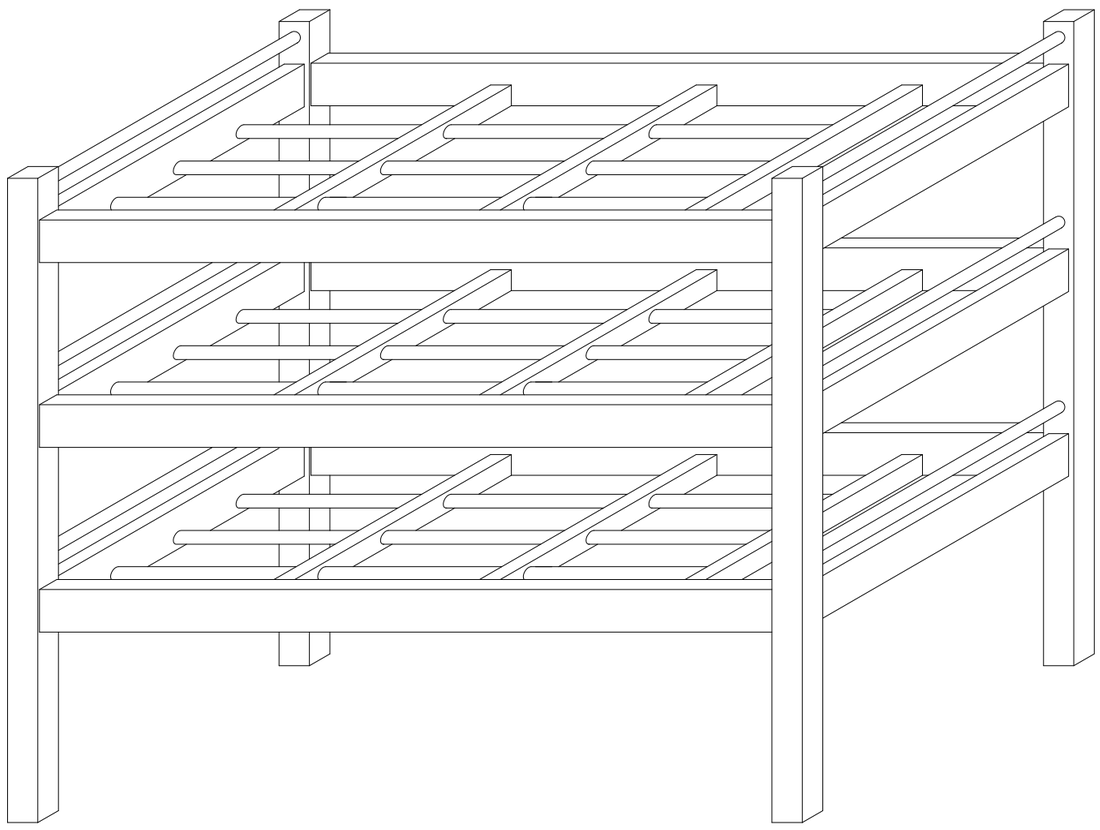

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A 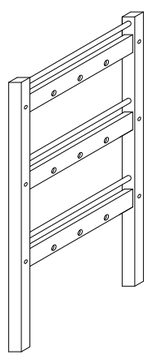 LEFT SIDE PANEL-1PC	B 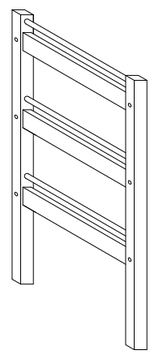 RIGHT SIDE PANEL-1PC	C  ACROSS PANELS-3PCS
D WOOD RODS-9PCS	E 11mm× 1-3/4" 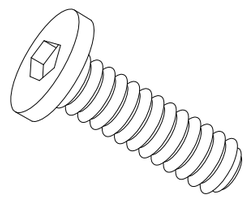 SCREWS-12PCS	F 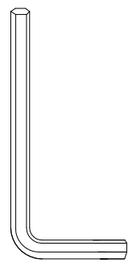 ALLEN WRENCH-1PC
G 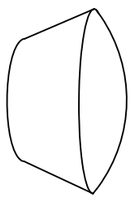 SCREW COVERS-12PCS		

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

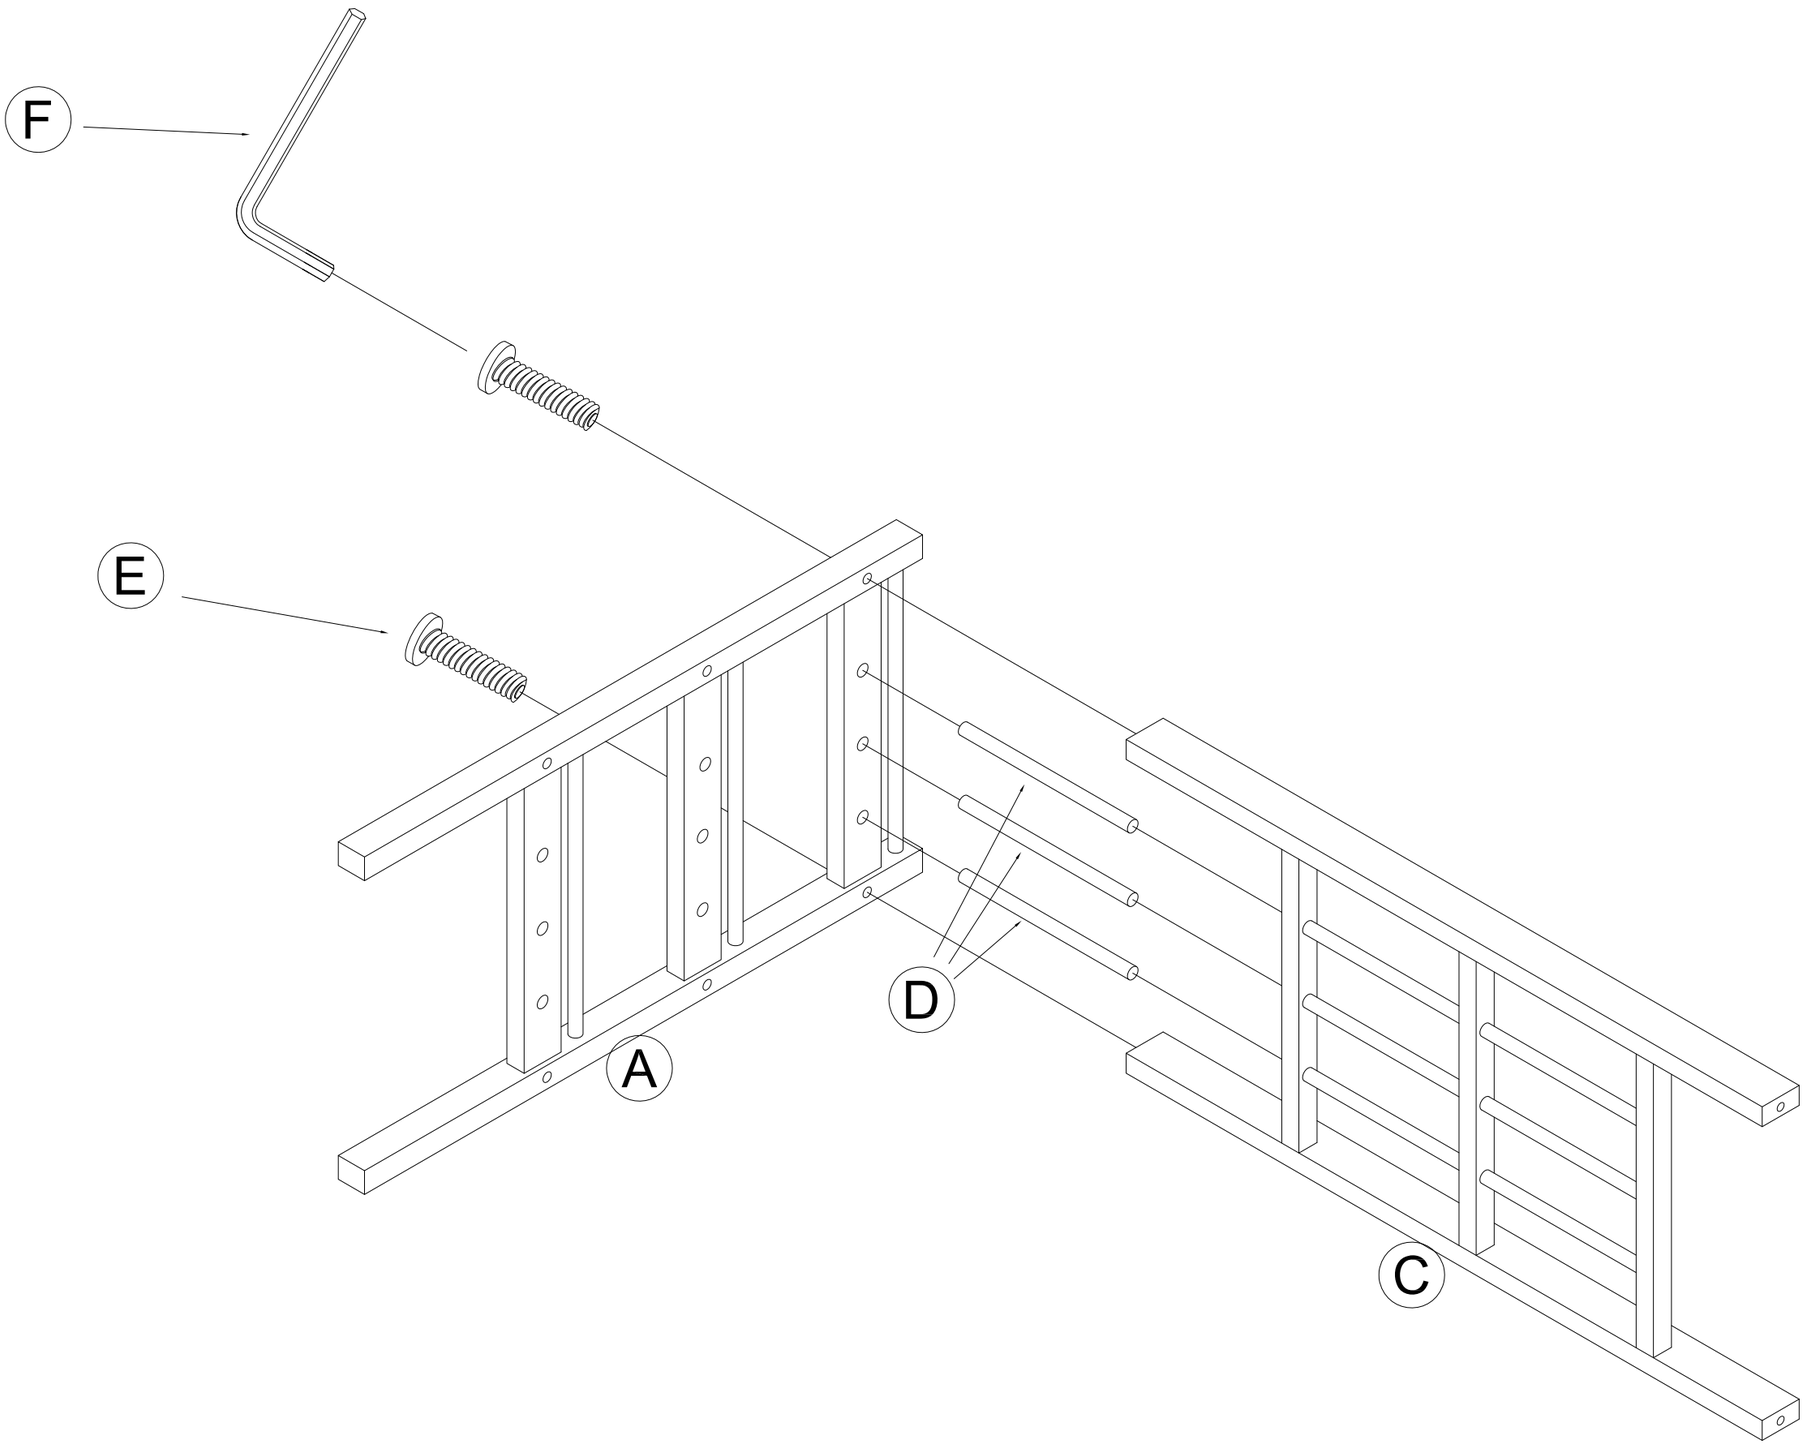

1). ASSEMBLE THE ACROSS PANEL(C).

- INSERT THE 3 WOOD RODS(D) INTO THE HOLES IN THE LEFT SIDE PANEL(A).
- ATTACH THE ACROSS PANEL(C) TO LEFT SIDE PANEL(A) USING 2 SCREWS(E).

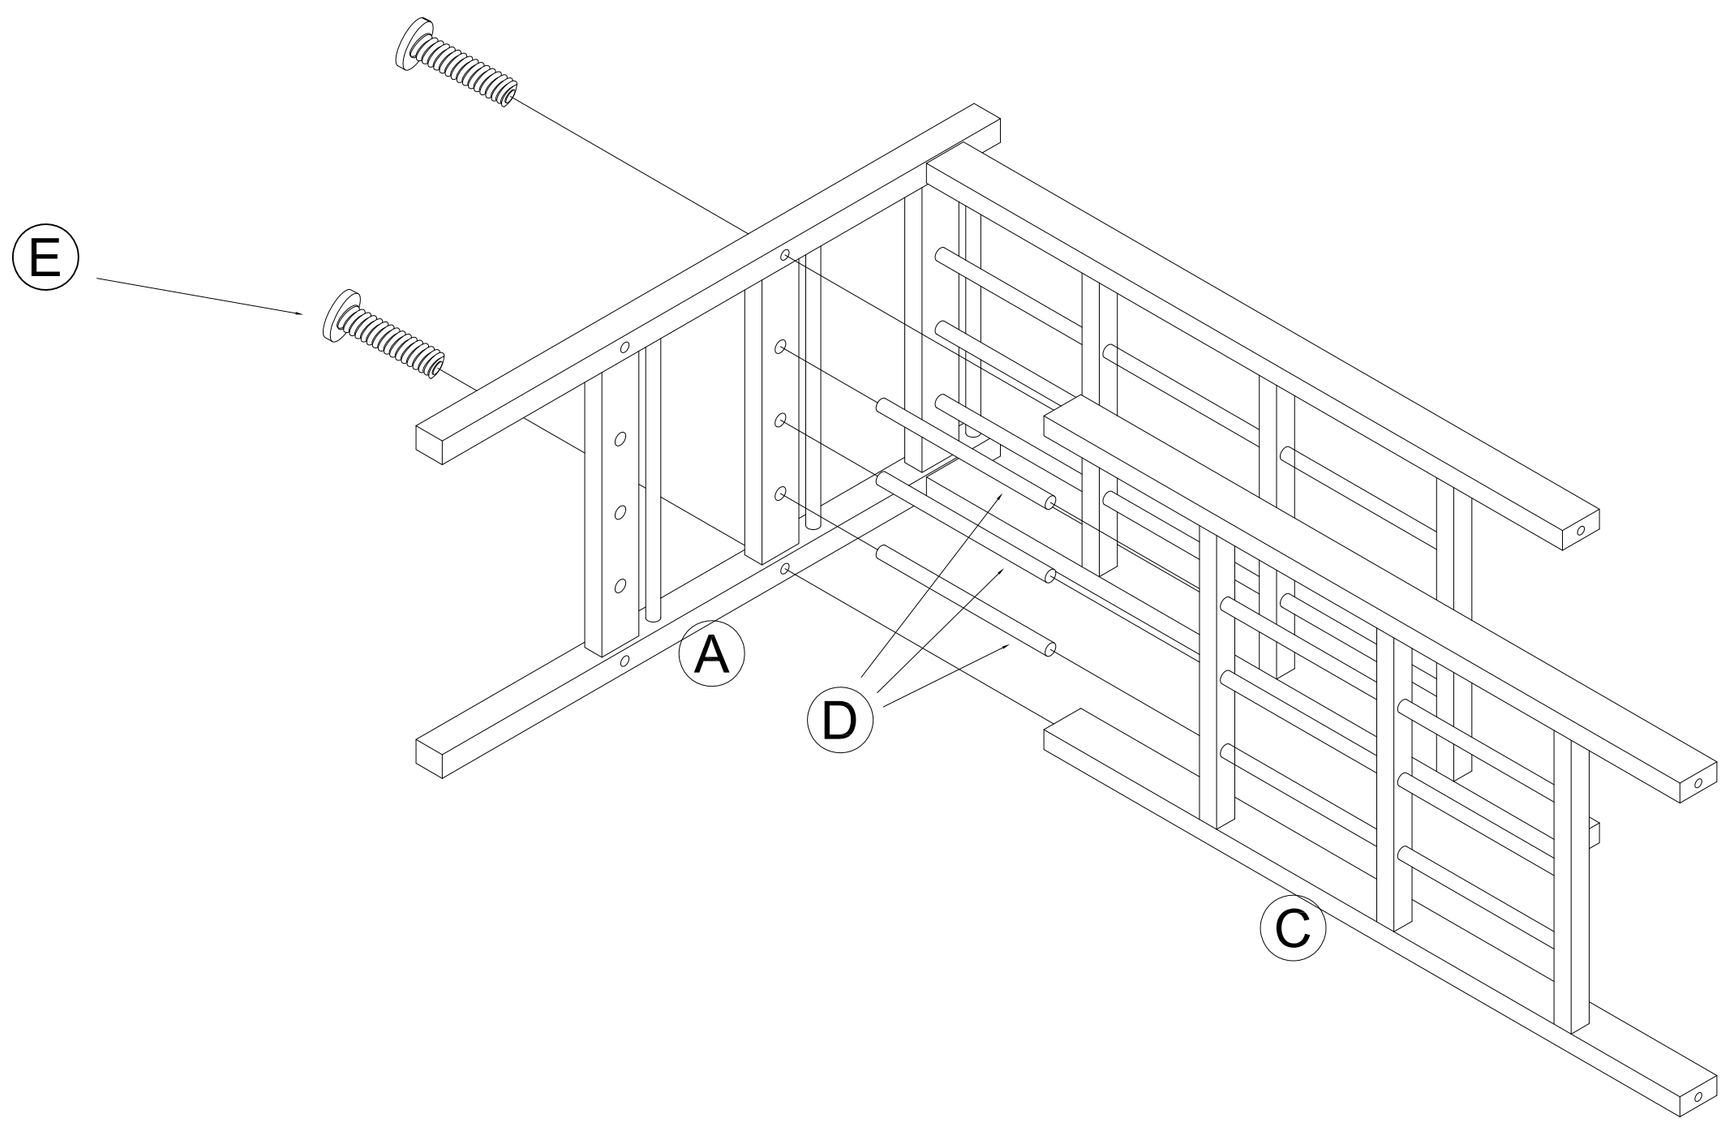

2). ASSEMBLE THE ACROSS PANEL(C).

- INSERT THE 3 WOOD RODS(D) INTO THE HOLES IN THE LEFT SIDE PANEL(A).
- ATTACH THE ACROSS PANEL(C) TO LEFT SIDE PANEL(A) USING 2 SCREWS(E).

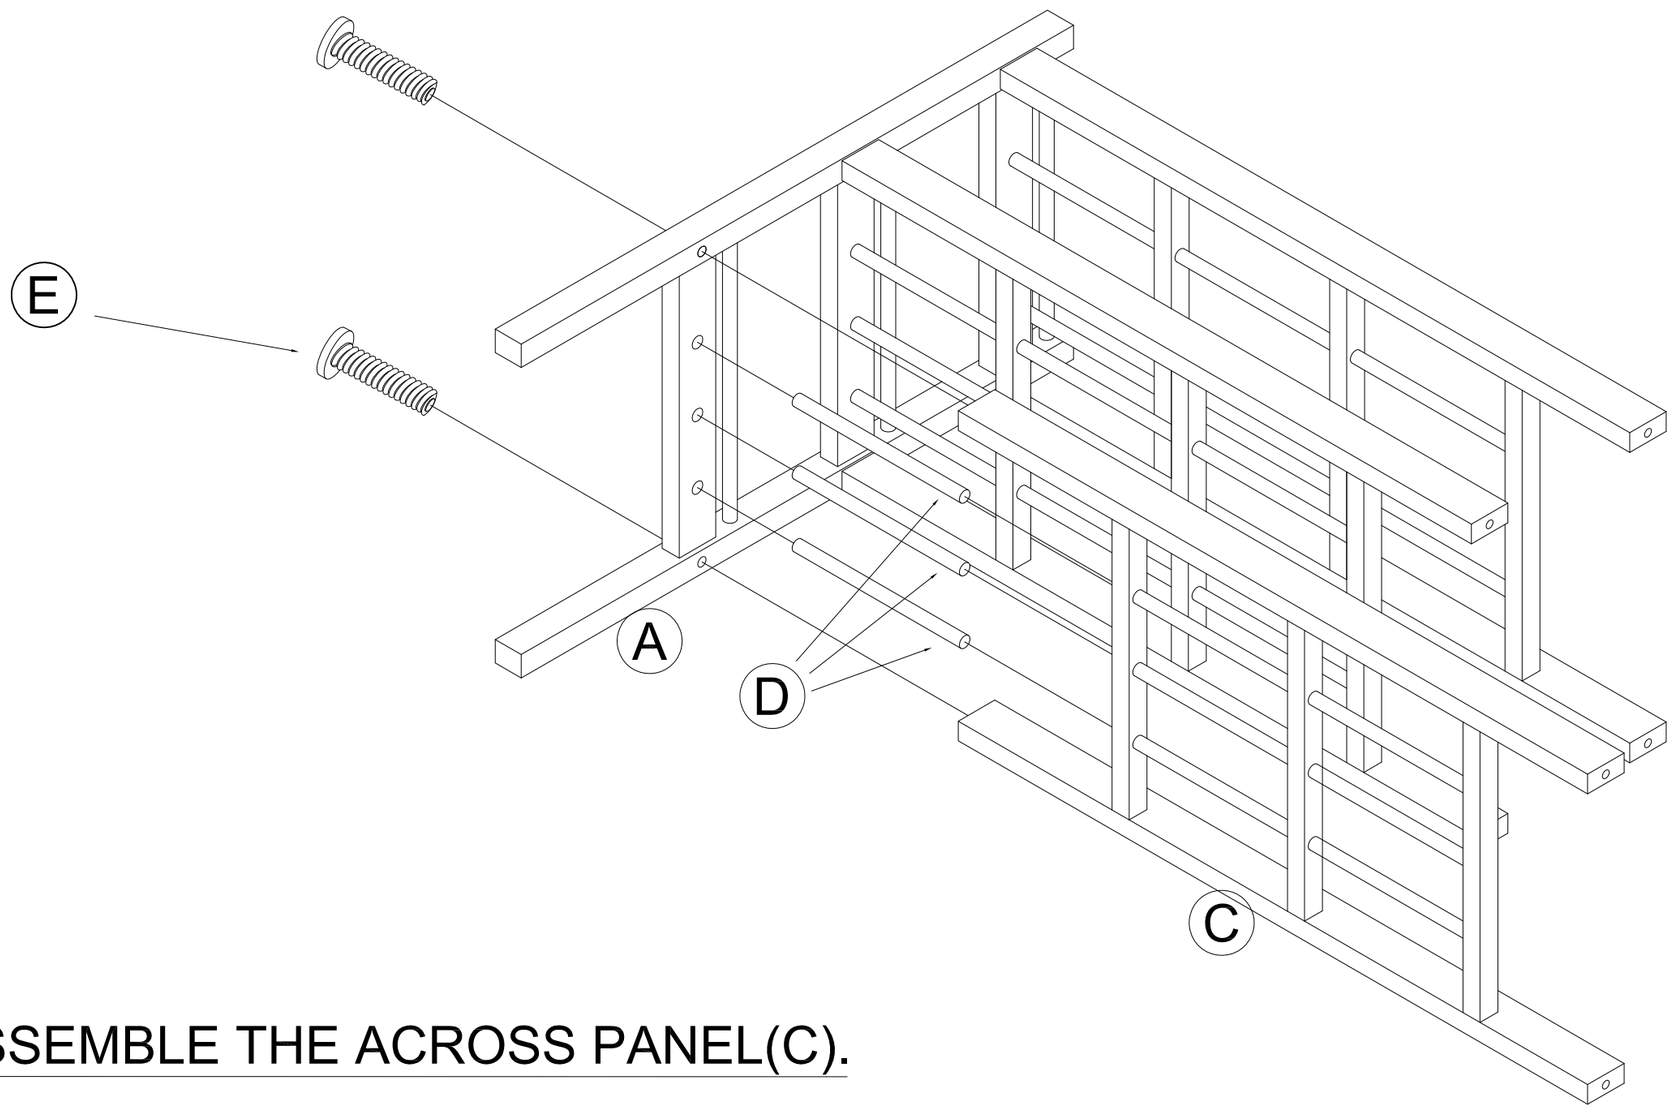

3). ASSEMBLE THE ACROSS PANEL(C).

- INSERT THE 3 WOOD RODS(D) INTO THE HOLES IN THE LEFT SIDE PANEL(A).
- ATTACH THE ACROSS PANEL(C) TO LEFT SIDE PANEL(A) USING 2 SCREWS(E).

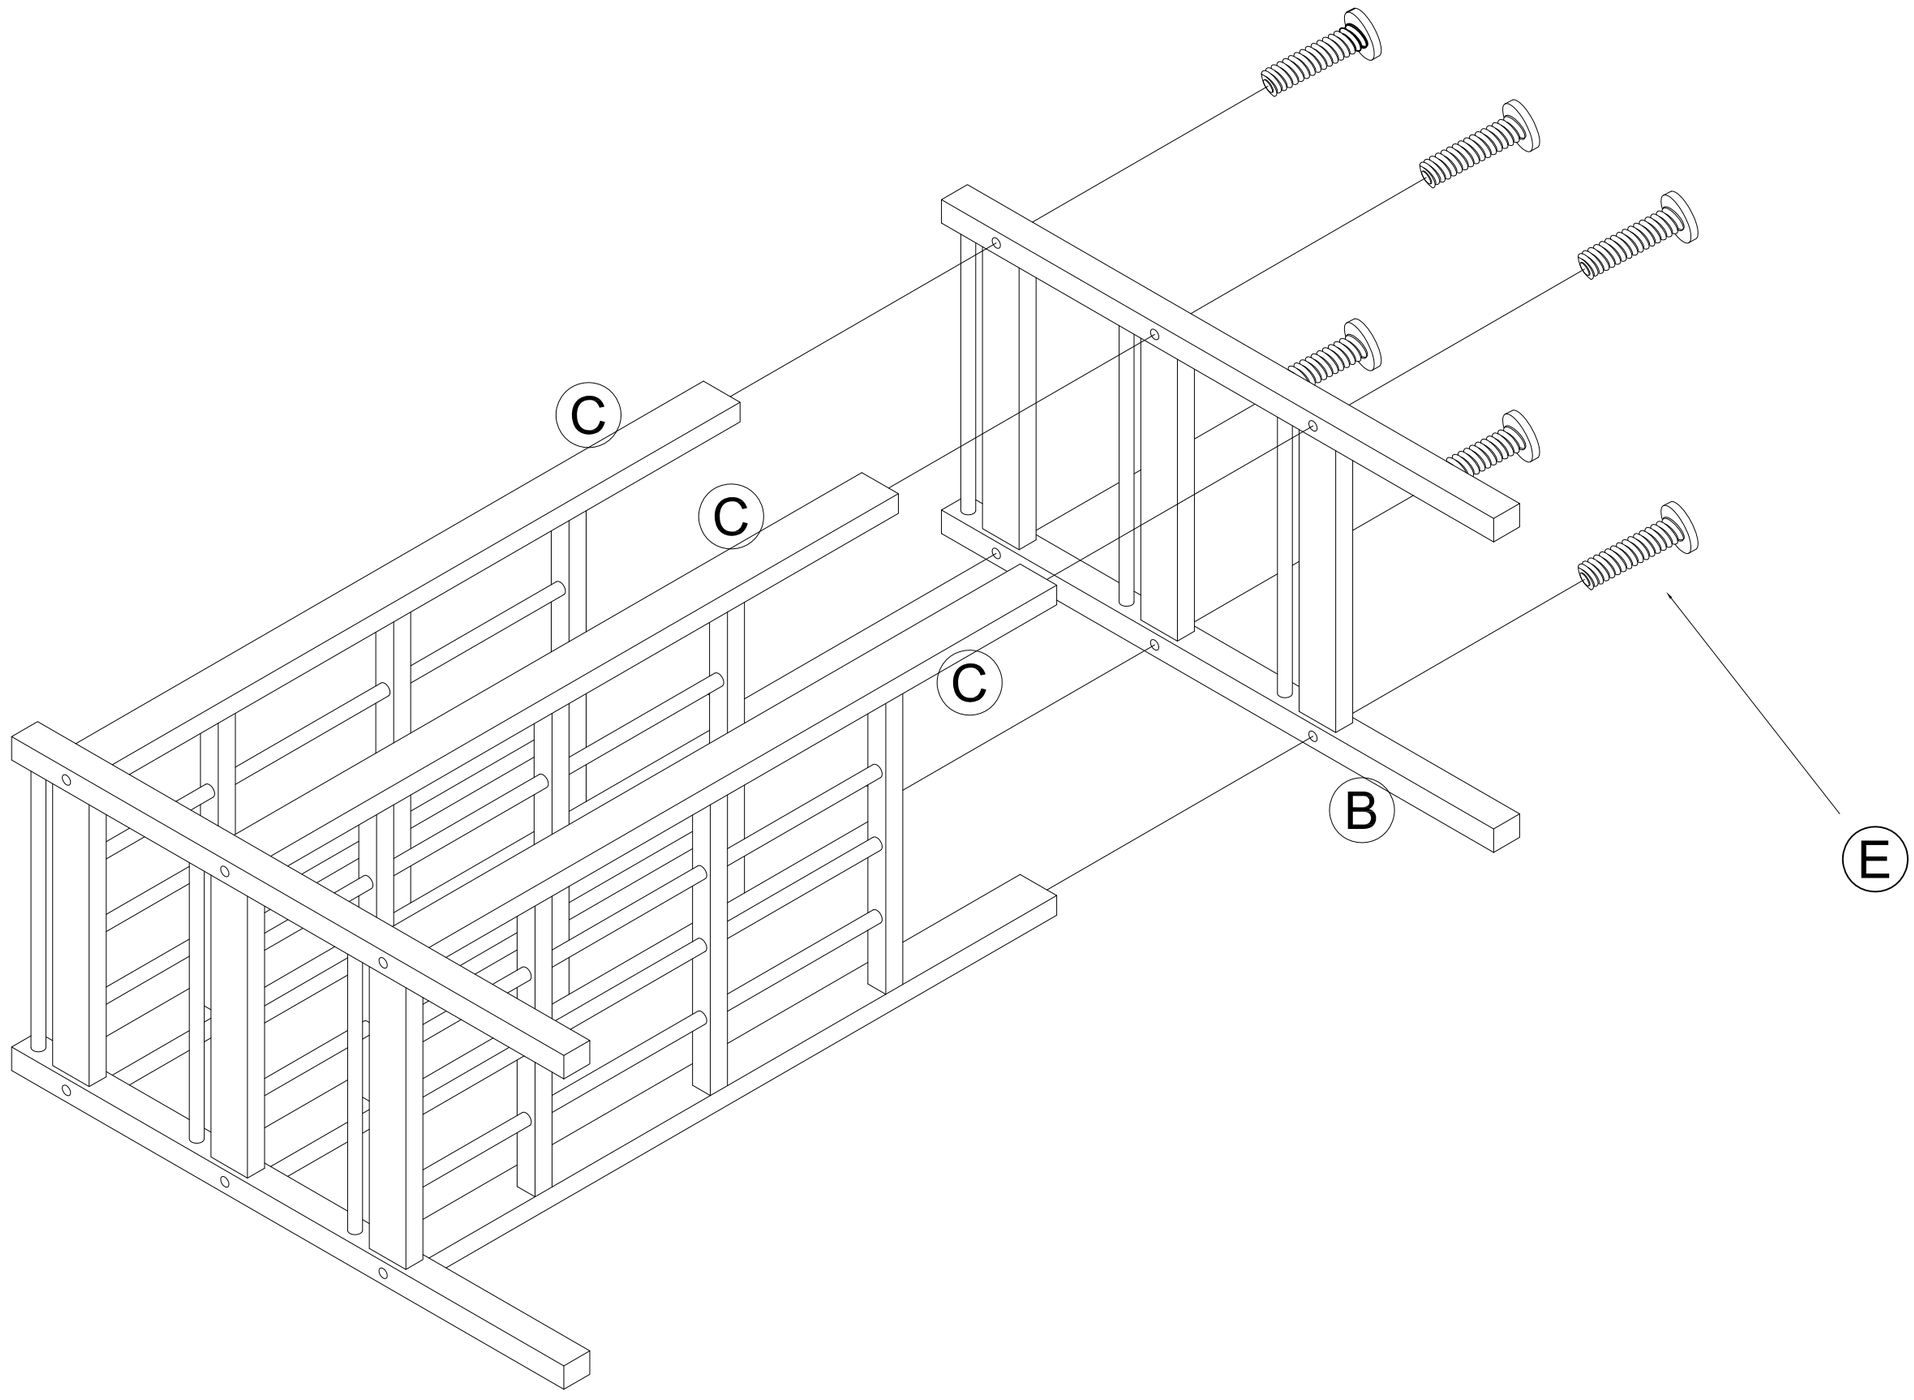

4). ASSEMBLE THE RIGHT SIDE PANEL(B).

- ATTACH THE RIGHT SIDE PANEL(B) TO ACROSS PANELS(C) USING 6 SCREWS(E).

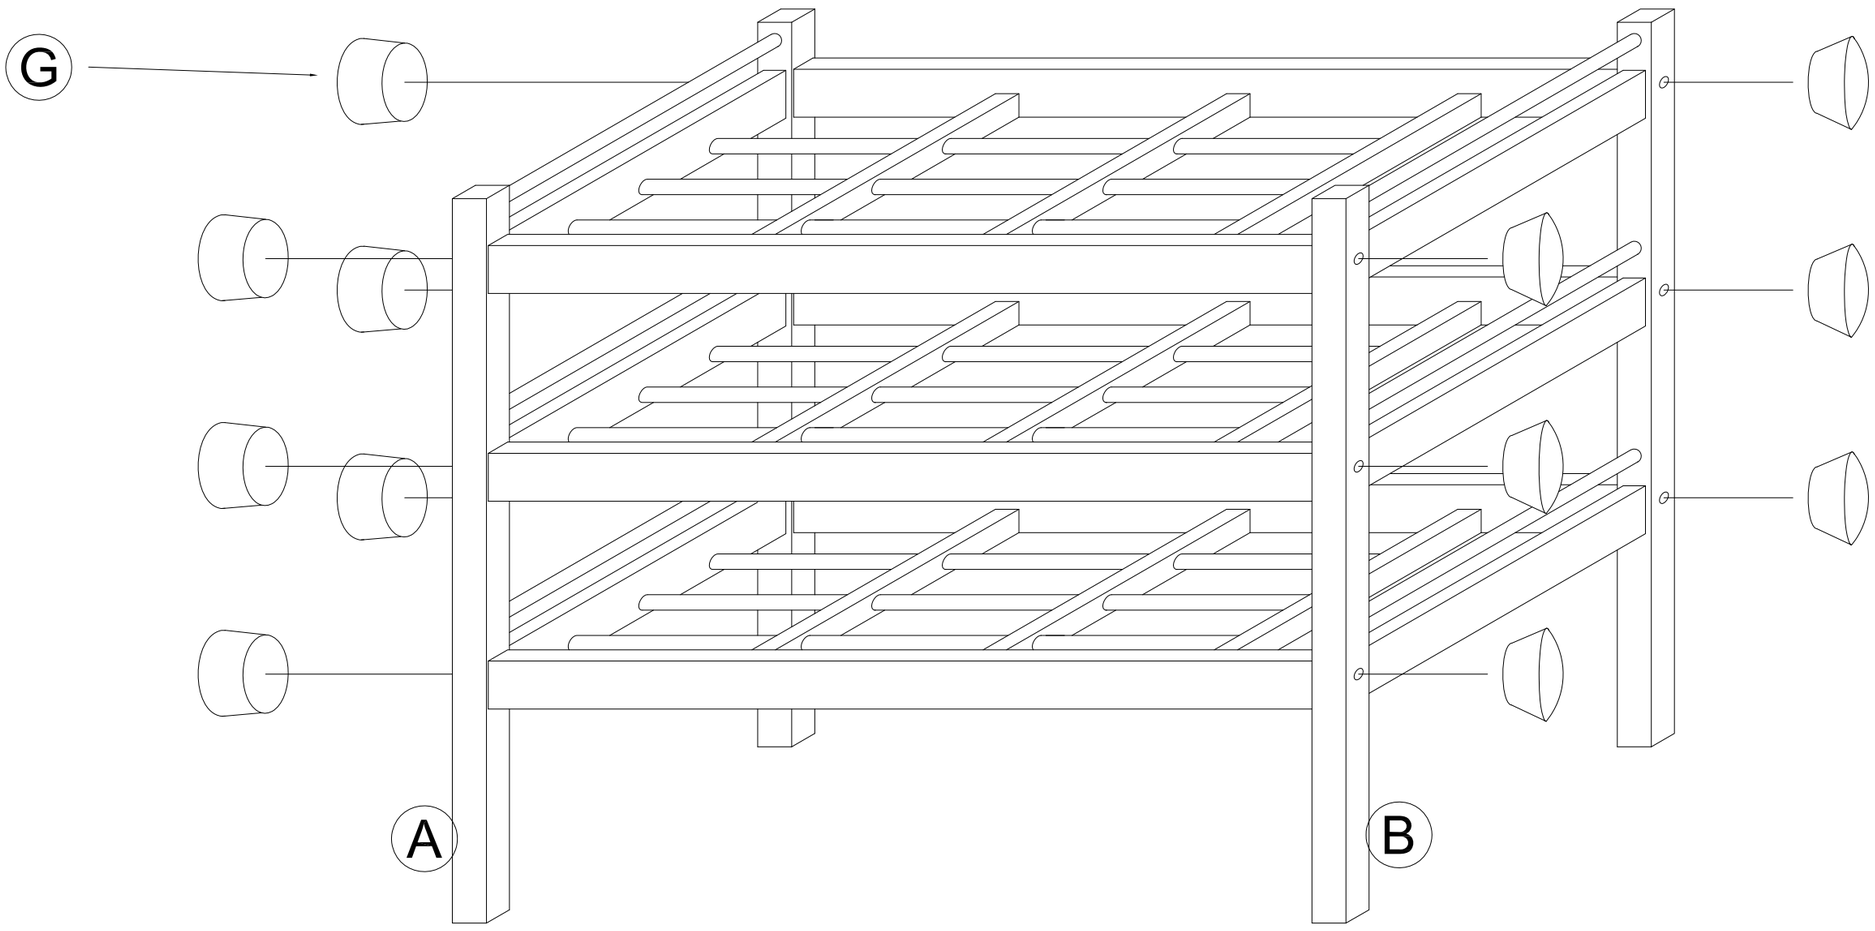

5). ASSEMBLE THE SCREW COVERS(G).

- ATTACH THE SCREW COVERS(G) INTO THE HOLES IN THE PANEL(A/B).